

M a n u a l



CURTAIN BRACKET

It stays right where you put it.

Follow the steps to properly install **BuffBrac** curtain brackets. Improper installation may cause the bracket to fall off from placement or result in damage.

Allow new paint to dry completely before use. Clean surface of any dust or particles.

Components:

- Body
- Wall Mount
- Arm

Adhesive Strips:

- 4 Large Adhesive
- Strips 2 Medium Adhesive Strips

To Assemble:

- Insert the arm into the body
Push until it clicks and tightens



EASY STEP BY STEP


Measure and mark exactly where pair of *BuffBrac* will go. Gently wipe surface with isopropyl alcohol and allow to dry completely.

Step 1

Peel off the protective layer on adhesive strips #1 and #2 to expose the sticky part.





Step 2

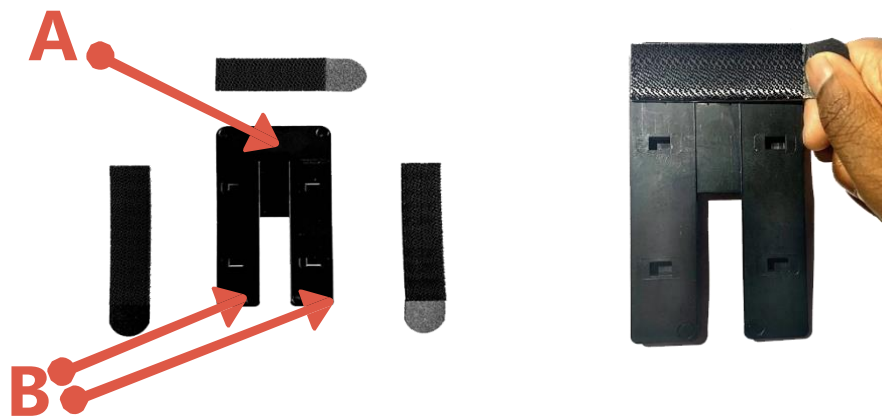

Using the solid lines on all sections of the wall mount as a guide. Apply strip #1 across **Section A** of the wall mount. Press strips firmly for approximately 20 seconds. Repeat the same for both **Sections B** with strip #2.

Step 3

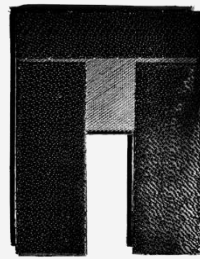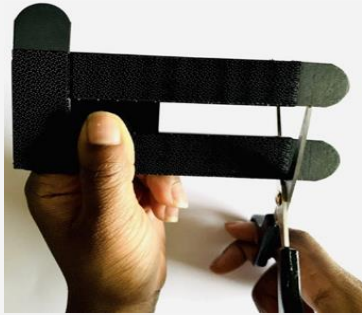

Trim all tabs hanging over the edges of the wall mount so they are even with the edges.

Step 4




Click another set of adhesive strips to the ones on the wall mount and align evenly. Expose the protective layer. Push firmly but gently against the wall surface. While holding down the strips on the wall, gently separate the wall mount from the strips on the wall.

Step 5



Press firmly for 30 seconds, wait 1 hour for adhesive strips to adhere to the wall. Then, align wall mount with the strips. Push firmly until all strips click together.

Step 6

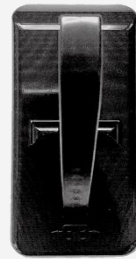

From the top section, bend and hold the tab onto the wall mount. Cover the bracket over the mount and tab. While pushing down, slide down until the bracket and wall mount latch together. Pull and tug on bracket to ensure it is firmly secure.

To Remove



Top Strip:

Slide the bracket up and away. Detach the Wall Mount from the strips on the wall. Hold the top tab, and gently pull horizontally, but slowly and steadily keeping it close to the surface as much as possible. Pull until it stretches, and the strip is released.

Bottom Strips:

Hold the tab and gently pull downward, slowly and steadily keeping it close to the surface as much as possible. Pull until it stretches, and the strip is released. Repeat steps for the other strip.

CAUTION

The bracket will adhere properly on an even surface. Do not apply it to wallpaper, over cribs, over beds, over fragile or valuable items. The adhesive strips may not be suitable in extreme temperatures or extreme weather conditions. Do not use in temperatures below 50F or above 105F.

Website: www.buffbrac.com

Email: care@buffbrac.com

BuffBrac



Made in USA